


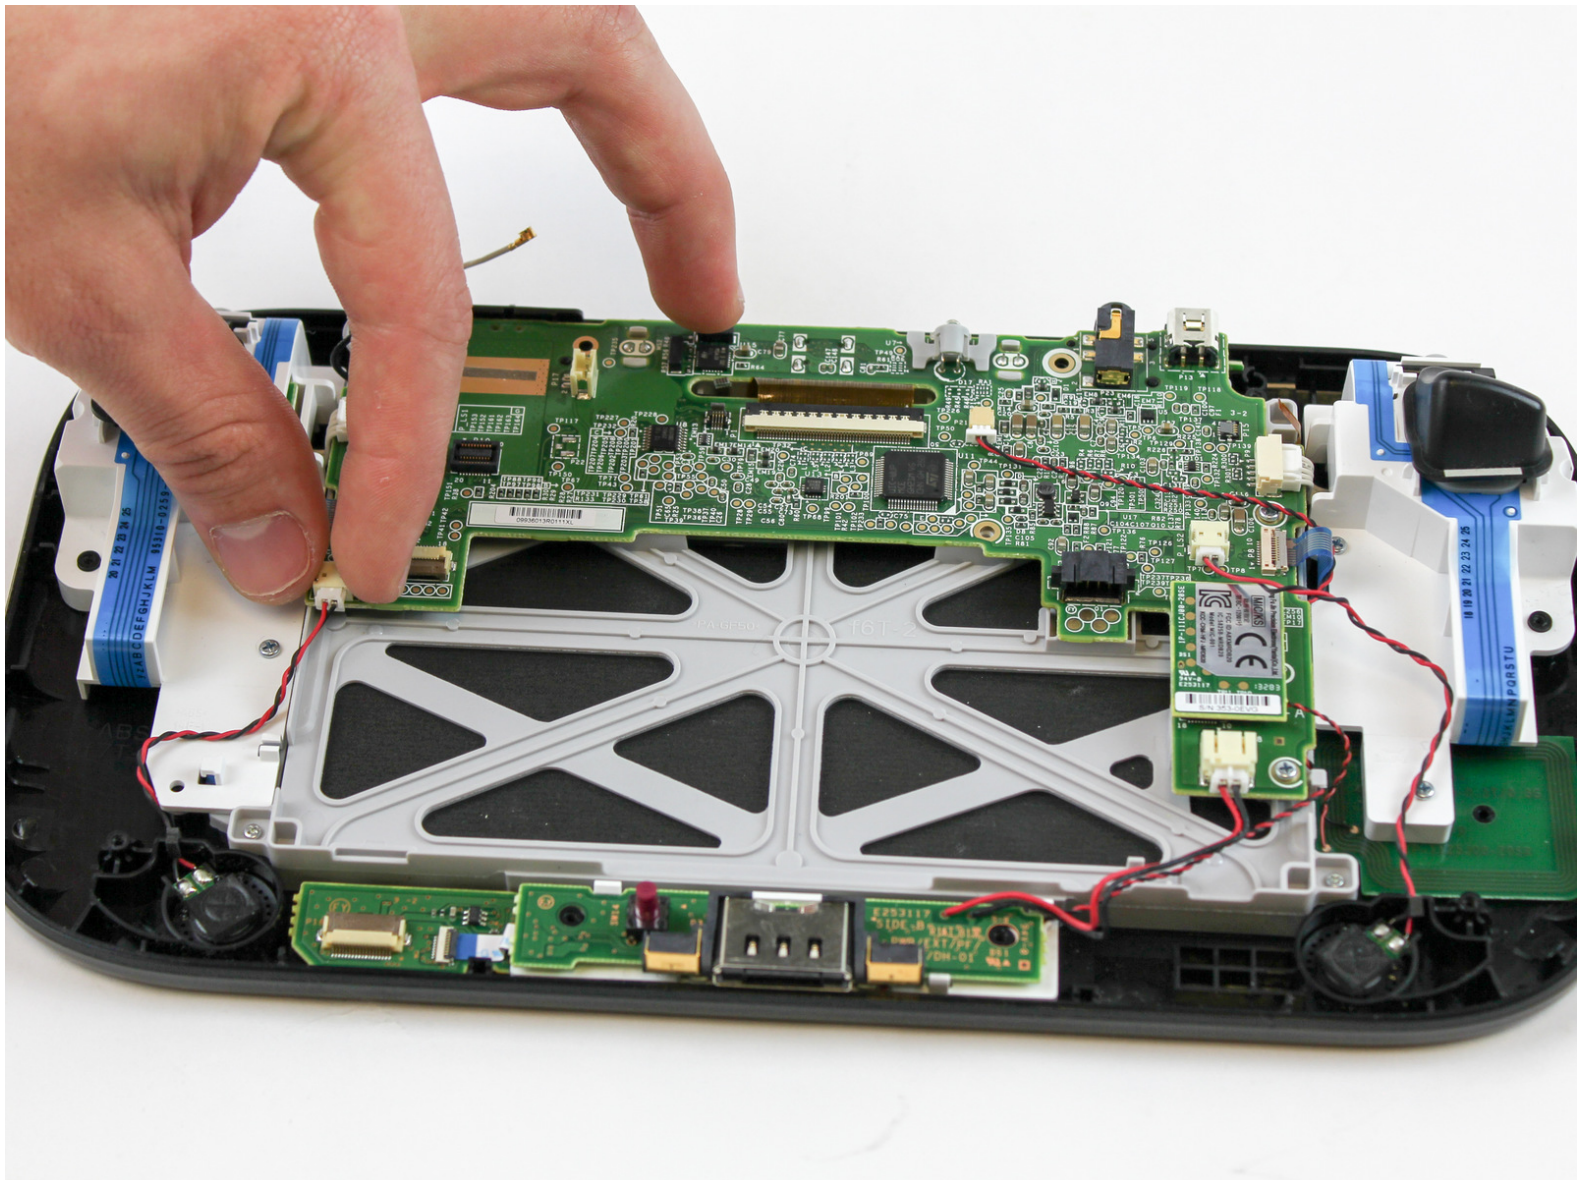

Wii U GamePad Speakers Replacement

Replace the speakers in order to get better sound in your Nintendo Wii U GamePad.

Written By: Valentina Cerruty



INTRODUCTION

This guide will help you to replace the speakers if you are experiencing audio issues.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Y1 Tri-wing Screwdriver](#) (1)
- [Tweezers](#) (1)



PARTS:

- [Wii U GamePad Speaker Assembly](#) (1)
-

Step 1 — Remove battery cover screws



- Place Gamepad face down and remove the two 4.7 mm screws with a Phillips size #0 screwdriver.

Step 2 — Remove battery cover



- Lift and remove the battery plate.

Step 3 — Unplug and remove battery




- With your finger, press down and pull back on the battery connector plug.
- Remove the battery from the battery case.

Step 4 — Outer Case





- Remove 10 9mm screws with Tri-Wing size Y1 screwdriver around the outer case.
 - Lift up on the back of case.
- ⚠ Lift gently because the rumble motor in the back of the case is still connected by a cable to the motherboard.

Step 5

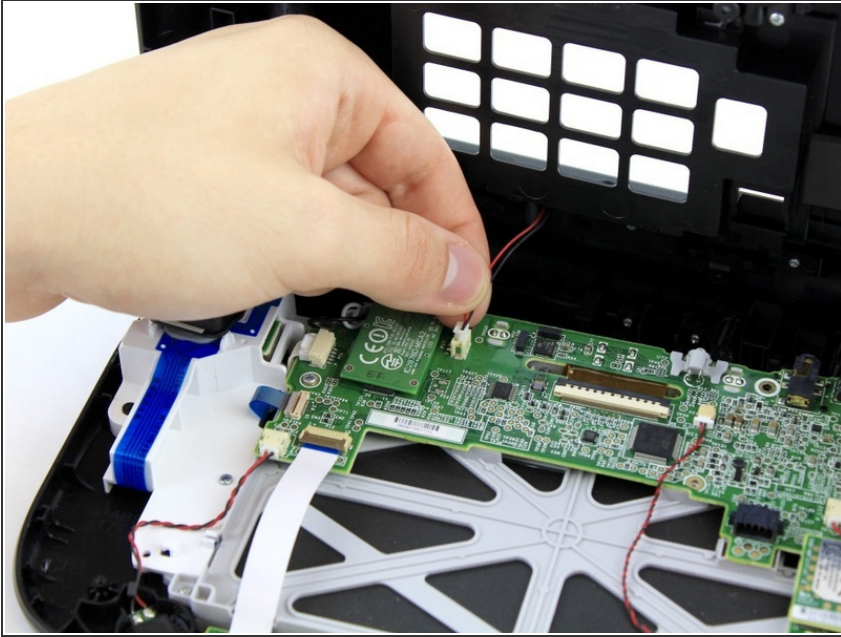



- Unplug outer case rumble motor connector from the motherboard with your fingers.

Step 6 — Speakers

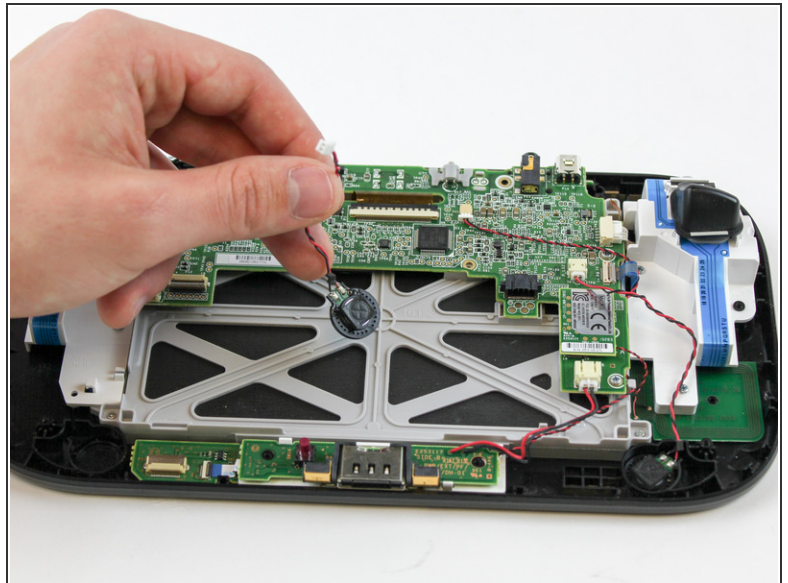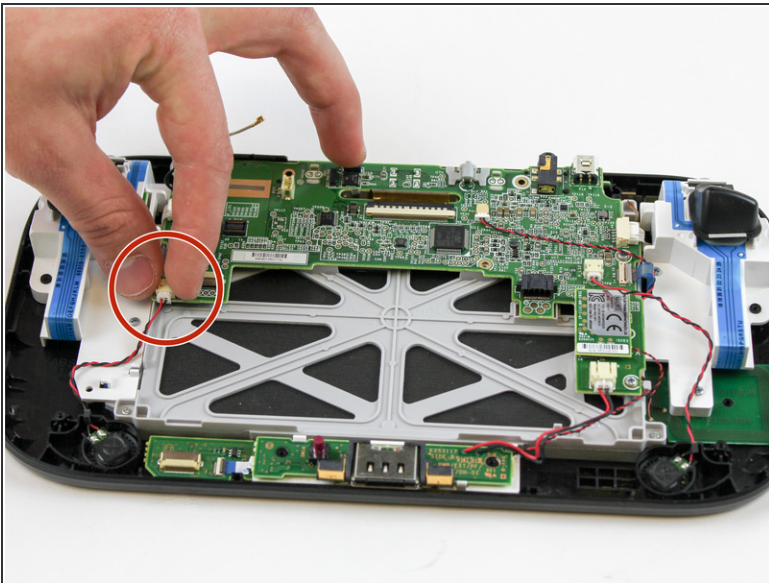

- With your fingers, unplug the left speaker cable from the motherboard.

Step 7

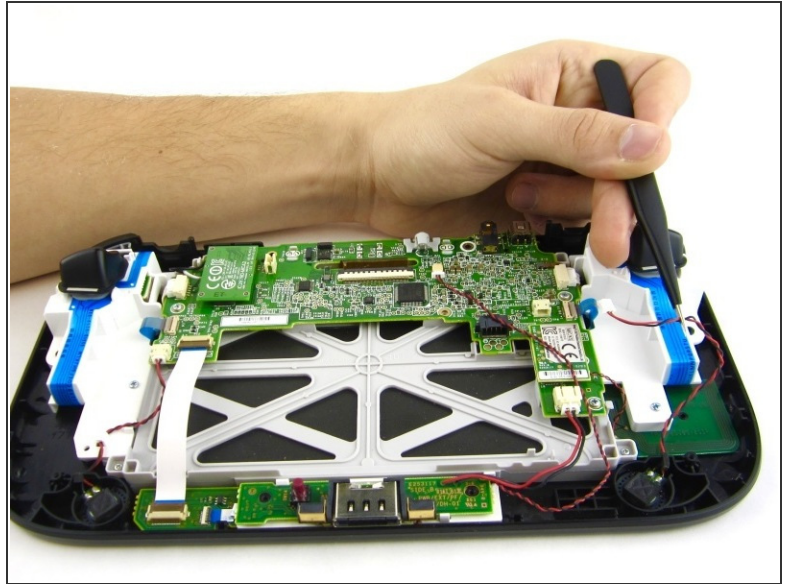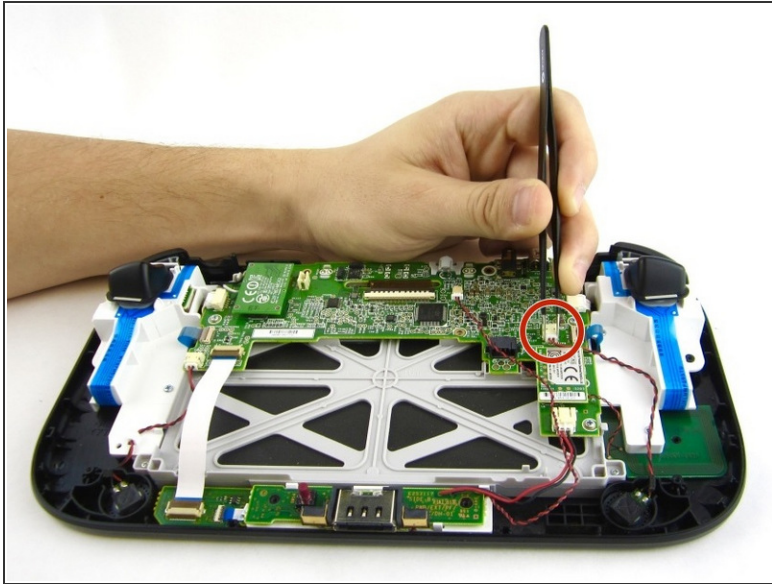

- Remove the right speaker cable that's connected to the motherboard with the tweezers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 11:46:58 AM.